



# T & E Pumps Parts Breakdown for 114RWNT

Item Number	Name	Quantity
EPT002	Sm Endplate for nitrated/tef	2
B002	Bushings - Inner plate	4
B25	Bushing - 2.5"	3
H002	Hold Down Ring c/w Flats	3
GN002	Grease Nipple Adapters	3
CT001	Combo cap for Teflon seal	3
CC002	Combo cap ends	3
NSK AELS206-102	1.125 Insert Ball bearing	3
AR-1592-EO	Seal	3
AR-M35-926	Teflon Seal	3
MDYE 3/8 plug	3/8 plug scre	2
GN001	Grease Nipples	4
G001-64	End Cap Gaskets	4
G002A-32	Durable Gasket Small	3
MDP12-112	1/2 x 1 1/2 Dowell Pin	4
MCSH8C12-134	1/2 x 1-3/4 GR8 Bolt	24
G002A-64	Durable Gasket-Small	3
M008-4100	Keystock for 7.25 & 7.5" gears	2
I003-18.5	18.5" Idler for 4100 &4000R	1
O035-7147	O-ring	3
W001	Washer - Aluminum	3
I010-26	Complete Input 26"/Teflon Seal	1
SG7.500	Steel Gears - set-7.500x5.125	1
WP001	Wear Plates -Small	2
HOU00750RCN	4000R - T&E Nitr Cast Housing	1
MFAS NNSC-031	5/16 PL NC Nylon Nut	16